



soft developmental toys

# GYMINI® Total Playground™

## Kick & Play™



The ultimate environment for baby-activated development, discovery & delight. Encourages head lifting, hand control, eye-hand coordination, motor skills and understanding of cause and effect relationships. Specially designed to stimulate the senses. Classical music encourages cognitive development.

### Instructions for use

(Keep for future use)

01280 011 A

www.tinylove.com

## Opened or Closed?



1 For the early stages of baby's development, you may want to lift up and close the extendable borders to create a safe and secure womb-like feeling for your baby. Just lift up 2 adjacent borders at a time and snap together at the corners (above where the arches are connected).



2 As your baby grows, you can open the borders to create an enlarged play area.



3 When baby has outgrown the GYMINI®, remove the arches, unsnap the borders and lay flat. Your infant can now enjoy a large activity mat

You may attach some of the hanging toys to the rings on the mat for further exploring.

# Playing

## With your Kick & Play™

Your new Kick & Play response pad is two toys in one - a kick-pad for baby's first months of development, and a touch-pad for enjoying tummy-time.

- As a kick-pad - Ensure that the Kick & Play response pad is tied vertically to the arch



- As a touch-pad for tummy-time - untie the Kick & Play response pad from the arch and lay the pad down flat. Baby is now ready to enjoy the "hands" side for tummy-time.



## Operating the Kick & Play™ response pad

- 1 Locate the ON/OFF switch located at the base of the Kick & Play response pad.



- 2 Select the desired play mode by sliding the switch to either the "Mozart" or "Play" position.

Selecting "Mozart" will play 10 minutes of continuous, relaxing music (recommended for young children at early stages of development). There are no flashing lights in the Mozart mode.

Selecting "Play" will play one of 3 short playful animal tunes (recommended when baby can lay on her tummy). Lights will flash when the music starts.



- 3 Once the music and lights stop, the Kick & Play response pad will play again only when activated by baby (through kicking or patting).

- 4 When baby is finished playing with the Kick & Play response pad, slide the switch to the "OFF" position.

# Changing/Inserting the Batteries



- 1 Release the Kick & Play response pad from the two Velcro straps, anchoring it on either side to the play mat.
- 2 Make sure the electronic music unit is in the "OFF" position.
- 3 Turn the unit over. Using a cross-head screwdriver, release the screw, take off the cover, and **insert 3 new AA(1.5 V) alkaline batteries.**
- 4 Replace the cover and tighten the screws firmly making sure it is well secured.
- 5 Return and secure the Kick & Play response pad to the blanket using the Velcro straps.
- 6 Your baby is now ready for play - on her tummy or on her back.

## Diaper Change



- 1 When baby is in need of a diaper change, simply unsnap the arches at the top of the GYMINI®, and drop them to the floor.
- 2 To re-assemble, pull the arches up and snap them back together on top.

# Folding the GYMINI®

When you want to store your GYMINI®, or take it with you, folding is easy:

When the arches and the design side of the blanket are facing away from you, simply fold in half (printed side facing out) the two sides with the snaps together.

Snap closed - and you're done.

## Cleaning and Storage

- 1 Release and remove the mirror from the blanket.
- 2 Detach the arches from all four corners of the blanket.
- 3 Remove the Kick & Play response pad from the mat.
- 4 You may machine-wash the blanket in cold water (no bleach) then line dry in the shade. Do not tumble dry or dry clean. For optimum care hand wash.
- 5 Reattach the arches at all four corners and then the Kick & Play response pad to the blanket.

**Note: Only the blanket may be machine or hand washed.** To clean the Kick & Play response pad, and the hanging toys, wipe with a damp cloth.

## And Don't Forget These Safety Rules:

- 1 Batteries should be replaced by adults only.
- 2 Do not mix old and new batteries.
- 3 Non-rechargeable batteries are not to be recharged.
- 4 Rechargeable batteries are to be removed from the toy before being charged.
- 5 Rechargeable batteries are only to be charged under adult supervision.
- 6 Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- 7 Exhausted batteries are to be removed from the toy.
- 8 Do not burn batteries. Dispose of batteries in a safe and appropriate manner.
- 9 Use only batteries of the same or equivalent type as recommended.
- 10 Batteries are to be inserted with the correct polarity.
- 11 The supply terminals are not to be short-circuited.

**For your child's safety:** Do not modify or alter this product in any way

**For more developmental information and playing tips please visit**

www.tinylove.com